

# **PC CONNECTED TO THE SOUND SYSTEM**

**If you wish to use just the sound system only a Windows PC can be connected to the system using only an HDMI connection then please follow the below instructions.**

**The Stage Sound and Lighting Box is located behind the curtains on stage on the right hand side. You will need a code to the key box on stage underneath the light switch (turn on stage lights) next to the stage sound and lighting box to obtain a key to the padlock on the doors of the stage sound & lighting box.**

**Please return the key to the box once the padlock is open and scramble the numbers of the key box.**

## **Start-Up Instructions**

### **STAGE HDMI CONNECTION**

Turn on the white power plug situated at the rear of the bottom shelf in the Stage Sound and Lighting Box for the light.

Unlock the metal rack underneath the Stage Sound & Lighting Box.

Keys are in the Stage Sound & Lighting Box, bottom shelf, on the left on a hook on the wall.

Turn on the power to the sub woofer - the power plug is at the bottom of the wall the same side of stage as the curtain pulley.

Press the power button on the following equipment in the metal rack; hearing loop, Denon amp, amp1, amp2, amp3, and amp4.

**DO Not Press** any power buttons on any kit on the bottom shelf in the Stage Sound and Lighting Box.

Connect up the PC by using the HDMI lead on the left hand side of the metal rack. An extension lead will be required for power as there are not any electrical sockets available near the equipment.

### **MULTI REMOTE CONTROL USE**


This multi remote controls all the equipment on the bottom shelf of the Stage Sound & Lighting Box.

## **Start-Up Instructions**

Locate the multi remote control, kept in its cradle on the left of the bottom shelf in the Stage Sound & Lighting Box.

Activate the screen on the multi remote control by touching the screen; make sure it displays the home screen as below picture, if not press the house icon on the multi remote control.

If the screen is completely blank then press and hold down the ‘off’ button located at the top of the remote for 3 seconds, the remote will power on and display the below home screen.

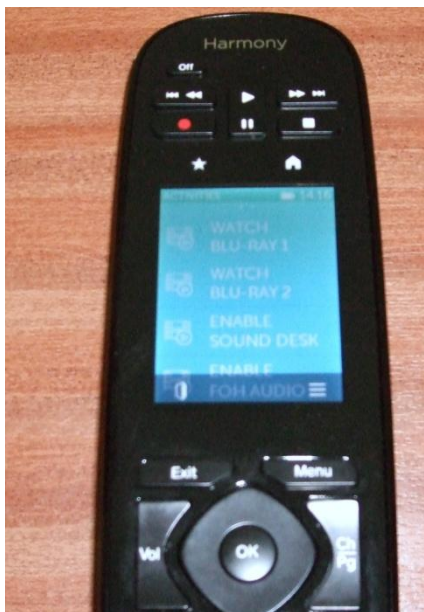


Caption	Used For
Watch Blu Ray1	DVD or Blue Ray Disks
Watch Blu Ray2	DVD or Blue Ray Disks
Enable Sound Desk	Microphones & Blue Tooth Adapter
Enable FOH Audio	VGA connection
Stage HDMI	HDMI Connection (No microphones)

Press the stage HDMI icon to activate this connection.

### Volume Levels

To activate the volume buttons there is a loud speaker icon on the above home screen display bottom left. Press this and the below screen is displayed

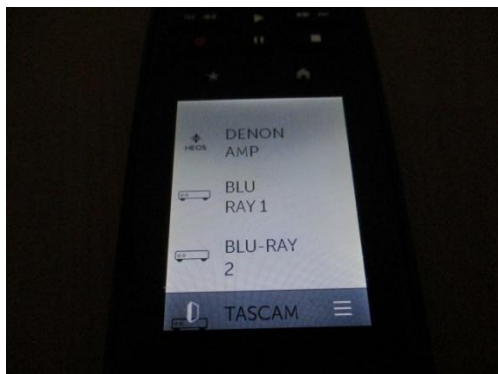

Press the Denon Amp caption and the volume control buttons on the multi remote control: they will now work. To increase the volume press the ‘Vol’ button upwards and to decrease the volume press the ‘Vol’ button downwards.

The left hand icon is now displaying ‘<’ the backwards arrow will take you back to a previous screen.

# End of the Session Shutdown Instructions

## Stage HDMI Shutdown Instructions

**Shutdown** Press Stage HDMI icon to stop the function you have been using.

Make sure the home screen is displayed on the multi remote control as below. If not press the house icon. All functions should be off as shown on below screen.



Replace the Multi Remote control to its cradle on the left on the bottom shelf in the Stage Sound & Lighting Box.

Un-cable the PC from the HDMI cable which is rolled up and left on the side of the metal rack.

Turn off the power to the sub woofer - the power plug is at the bottom of the wall the same side of stage as the curtain pulley.

Press the power button to turn off the following equipment in the metal rack; Amp1, amp2, amp3, amp4 and hearing loop, the Denon amp should be already off, if not then turn it off.

Lock the metal cabinet and return the key to its location in the Stage Sound & Lighting Box.

Turn off power plug situated at the rear of the second shelf in the Stage Sound & Lighting Box for the Light

Remember to lock the Stage Sound & Lighting Box and don't forget to turn off lights on stage.